


When wiring an Arduino board, make sure you wire the components in correctly as labelled below. Wiring things the wrong way around can make the smoke come out.....

Black = negative = G  
 Red = positive = V  
 White = signal = S

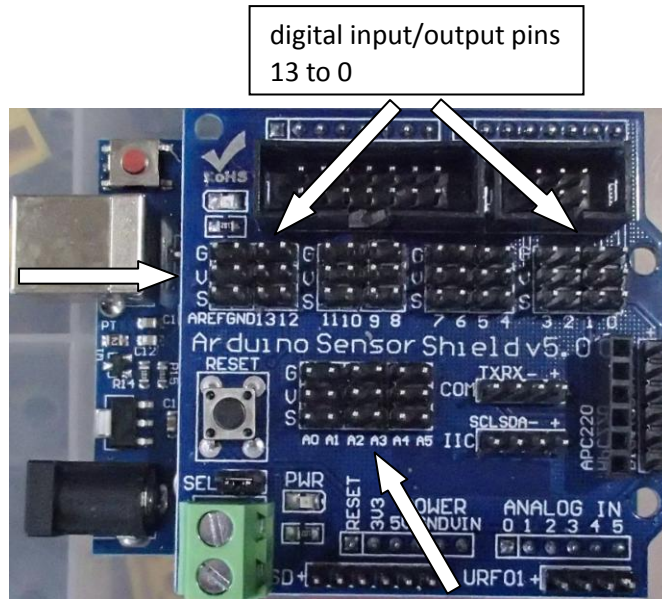

digital input/output pins  
 13 to 0

analog input pins  
 A0 to A5

When you have typed it all, "compile" it by clicking this button. This will show any errors in the typing. Check it all again.



When it is compiled okay, then "upload" it by clicking this button.

It will probably not "Upload" the first time. So click on the "Tools" button and select the "Port" to whatever "com" port is shown. (as indicated below.) Then try "Upload" again.

